


MAGNETIC POWER BANK

Item No. TPB-MW0523

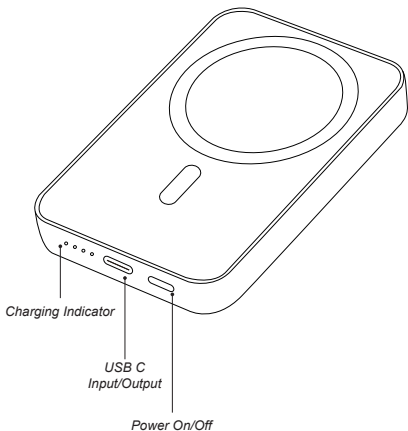

Please read this manual carefully before initial operation and keep it for future reference or other users.

SPECIFICATIONS

Battery: Lithium Polymer Battery

Capacity: 5000mAh / 3.7V / 18.5Wh

USB-C Input: 5V3A; 9V2A; 12V1.5A

USB-C Output: 5V3A; 9V2.2A; 12V1.65A

Wireless Output: 15W

SCOPE OF DELIVERY

1x Powerbank

1x USB-C Charging Cable

1x User Manual

CHARGING YOUR DEVICES

- > The Powerbank offers one USB-C output for charging many types of devices.*
- > The Powerbank offers wireless charging.*

CHARGING THE POWERBANK

- > When using the first time or after a long storage period, the powerbank should be charged about 6 hours.*
- > Full power is usually achieved after the third complete charging.*
- > Start charging by inserting the supplied charging cable into the USB-C port and the other end with your Power Adapter.*
- > While recharging the battery, the blue LEDs are flashing according to the energy level. Fully charged the LEDs are all on.*

IMPORTANT SAFETY PRECAUTIONS

> Please note that rechargeable batteries have a limited lifespan.

They discharge and lose capacity even when the device is not in use.

Therefore, never store rechargeable batteries completely discharged and avoid deep discharge, otherwise they may deform when empty and even swell up due to outgassing! So it is recommended to fully charge the batteries every 3 months! However, not only deep discharge, but also overcharging or damage to the battery can lead to the failure of internal components. The release of gases also causes swelling up the battery. If a battery swells up, do not charge it or use it anymore, store it in a cool place and take it to a qualified disposal company immediately. All these causes are due to technical limitations, do not constitute grounds for complaint and are not covered by the warranty.

> For private use only.

> Keep out of reach of children.

> Do not expose to rain, moisture or snow.

> Keep it away from heat and fire - fire hazard.

> Do not operate if it has received a sharp blow, has been dropped, or is damaged in any way, take it to a qualified service person.

> Do not disassemble powerbank. Incorrect reassembly may result in a risk of electric shock or fire.

> Do not use under water or immerse in water.

> Do not operate the powerbank while charging.

> In case of abuse there is a risk of injury by escaping gases, liquid or explosion.

COMISSIONING

During the charging process, the product is heated, this is normal.

If you find that the product gets extremely hot, disconnect the power supply and do not use it any more - Risk of injury by escaping gases,liquid or explosion!

WARNING

Please read the Manual.



This symbol both on the product and its user manual indicates that the item should be disposed of separately from household waste.

The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment.



Made in China